


POLYMER PANEL INSTALLATION


REMARKS:
***DO NOT USE HEAT GUN OR DECAP GUN BECAUSE THE INTENSE HEAT COULD DAMAGE THE PANELS.**
***DO NOT HEAT THE POLYMER PANELS ON RAINY DAYS; THIS COULD LEAVE MARKS.**

The polymer panels have been cut to fit, taking into account that they will expand when they are installed. Therefore, they may seem too small at first. If necessary, heat the polymer panel's surface equally using a hair dryer.

Unpack the polymer panels one by one. Handle with care. You can put them up following the way they were packed; this will prevent them from being handled too much.

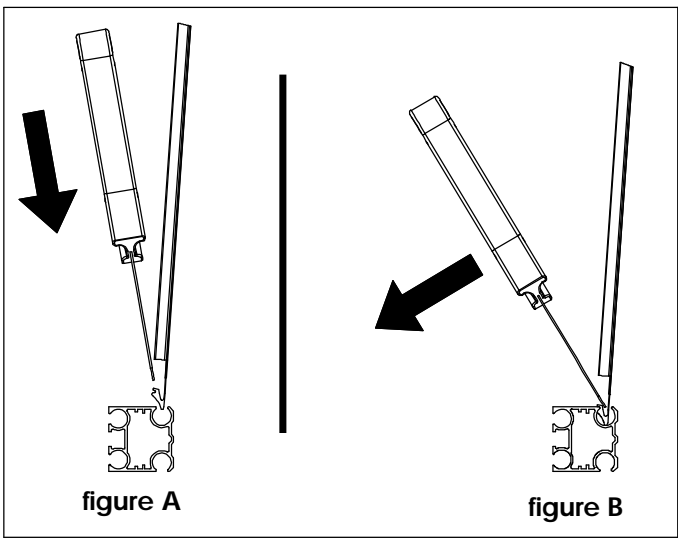

Using the spatula included in box #1 of 4, insert the polymer panels by pushing them deep in the groove (see figure A) and bring back the spatula toward you (see figure B).

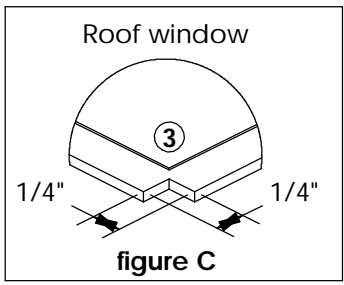

Cut one corner of window roof (figure D) such illustrated in figure C.

